




Fibre Channel Networking / Fabric OS Software Generating a License Key or Certificate

/ Brocade® Fabric OS® Software Licensing User Guide, 9.1.x / Software Licensing Configuration Tasks

## BROCADE® FABRIC OS® SOFTWARE LICENSING USER GUIDE,

Search this product

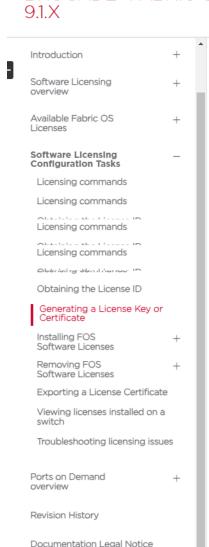

## Generating a License Key or Certificate

Last Updated June 20, 2022

Before you begin: Use the following procedure to generate and obtain a FOS license key or certificate:

- 1. Go to https://www.broadcom.com, and then select the Log in drop-down at the top-right of the web page.
- 2. Click Log in or Register. Once logged in, you are redirected to the Broadcom support portal.
- 3. Click Brocade Products. You are redirected to the Brocade Products page.
- 4. Click Licensing. You are redirected to the Broadcom Licensing Portal page.
- 5. Enter the transaction key, and click Next to continue.



Note: Re-host keys are generated only by the SANnav TM application and are used only on SANnav.

- 6. In the Unit Information field, enter the license ID (LID) that you obtained earlier. Click Next to continue
- 7. Read the Broadcom End User License Agreement, and if you agree to the terms, select the I have read and accept
- Click Generate to generate the license. The license key is sent by email and can also be downloaded by selecting the blue license hyperlink from the Broadcom Licensing Portal UI.
- 9. If a license string is generated, save it to your local folder for future reference.
- 10. If an XML certificate file is generated, save it to the remote server, where it is retrieved for installing the license.

Next steps:

Next, you must install the license on the FOS device.

Content feedback and comments

## PRODUCTS SOLUTIONS SUPPORT COMPANY HOW TO BUY

Copyright © 2005-2022 Broadcom. All Rights Reserved. The term "Broadcom" refers to Broadcom Inc. and/or its subsidiaries.

Privacy Supplier Responsibility Terms of Use Sitemap

